


Electrical schematics and connections of RAAL ribbon drivers

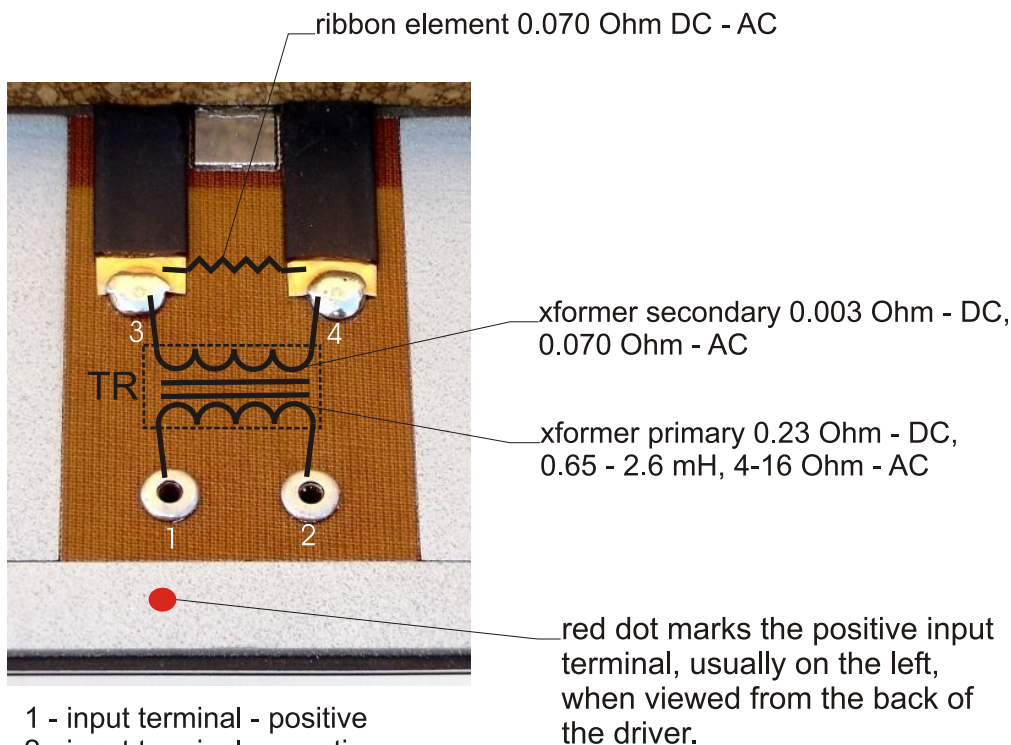

- 1 - input terminal - positive
- 2 - input terminal - negative
- 3 - ribbon terminal - do not connect
- 4 - ribbon terminal - do not connect

soldering points 1 and 2 are the only connections that user can use. Points 3 and 4 are to be unsoldered only in case of replacing the ribbon element and are not to be used by the user as inputs under any circumstances.